



Detailed instructions for use of Gudrutis Super-G Active
Detailed instructions for use of the Super-G app



CONTENTS

About the watch	3
Watch model and main functions	3
Technical parameters of Gudrutis Super G Blast	3
Learn your watch	4
Device set	4
Watch housing and display	4
Watch screen control	5
Getting ready	6
SIM card	6
Charging and turning of the watch	6
Watch menu	7
Controlling the watch with Super-G app	8
How to install the app?	8
How to register and add Gudrutis?	9
More features of Super-G	12
Calls	12
Messages	12
Child's location	12
Multiple devices	13
More settings	13
Your profile and settings	13
Password changing	13
Password reminder	14
Child profile and settings	16
Warranty and servicing	18
Questions? Contact us!	18

About the watch

Watch model and main functions

Gudrutis Super-G Blast

Technical parameters of Gudrutis Super G Blast

- Calls, voice and text messages to the watch;
- Calls and voice messages from the watch;
- 15 contact book;
- 1.3" IPS colour touch screen;
- 240 * 240 screen resolution;
- CPU: MTK2503A-ARM7;
- Ultra-low power dissipation;
- Battery operation: up to 2 days*;
- Nano SIM card;
- Positioning**;
- Alarm;
- SOS help button;
- 'Not to disturb' mode;
- Low battery messages;

* Battery life depends on the watch update settings you choose, the way you use the watch, and natural wear.

** Outdoors, the device navigates by WiFi and GPS, indoors by WiFi and GSM. Positioning error is possible depending on the communication operator, positioning signal and other technical conditions. This is not an exact location device!

! Attention! Calls and data transfer require a 2G SIM card with a call plan, SMS and mobile data plan (about 50 MB/month).


Attention Danger! The watch is not water resistant (has no IP certificate). We do not recommend immersing the device in water/liquids or pouring water/liquids directly onto the housing. If the watch case is wet or mechanically damaged, the warranty shall be void.

Learn your watch

Device set

Make sure the box contains all components:

- watch-phone
- charging unit
- screwdriver
- start guide

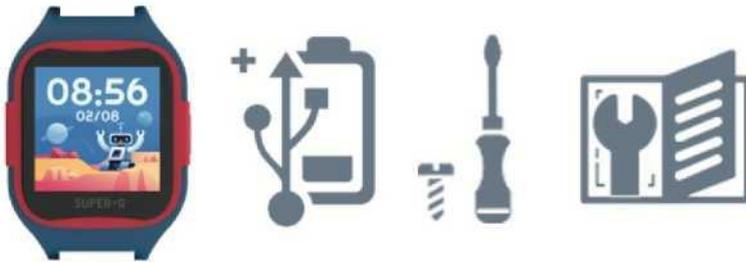

Watch housing and display

Loudspeaker



Touch screen


Microphone



- Power On/Off toggle click button

- SOS Button

- End/reject call

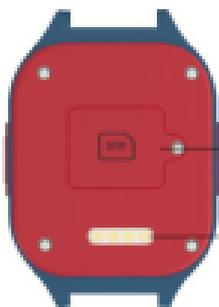

Nano SIM card slot

Charging slot

Mobile data
identifier
Connection
divisions
Vibration mode
Battery
divisions



Watch screen control



Swipe left to navigate between the watch functions.



Click on the icon to select the required function.



Swipe right to return to the menu or exit a function.




To adjust the volume of your call, swipe up/down.

Getting ready

SIM card

Insert the SIM* card into the watch as shown in the picture:

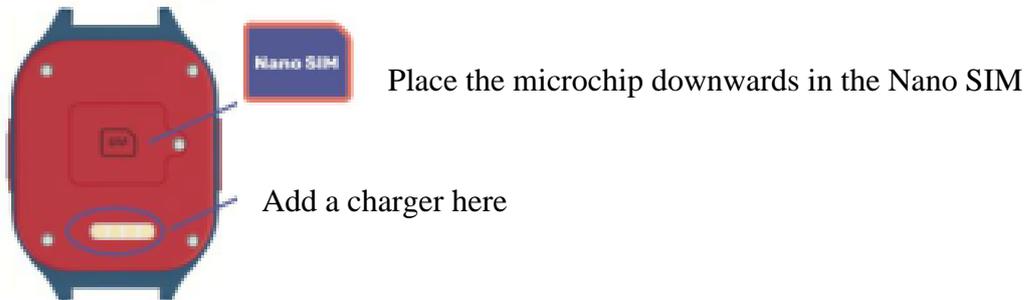

- Make sure the SIM card has no PIN code (you can remove it by inserting the SIM card into your phone);
- Make sure the device is off
- Use the screwdriver to open the SIM card cover;
- Insert the card carefully;
- Use a screwdriver to close the cover securely.

***Important!**

The watch only supports 2G SIM cards. Mobile data, calls, and SMS must be activated on your SIM card.

We recommend to have at least 50 MB of mobile data per month.


Charging and turning the watch on/off

After successfully inserting the SIM card, charge the watch:

- Attach the magnetic charger to the back of the watch as shown in the picture;
- Make sure the charger is properly inserted;
- You should see the battery charging icon on the screen;
- Charge the watch until the battery is full!*
- Turn on Gudrutis by pressing and holding the side button

Turning off the watch

Turn off the watch by holding the side button for ~10 seconds.

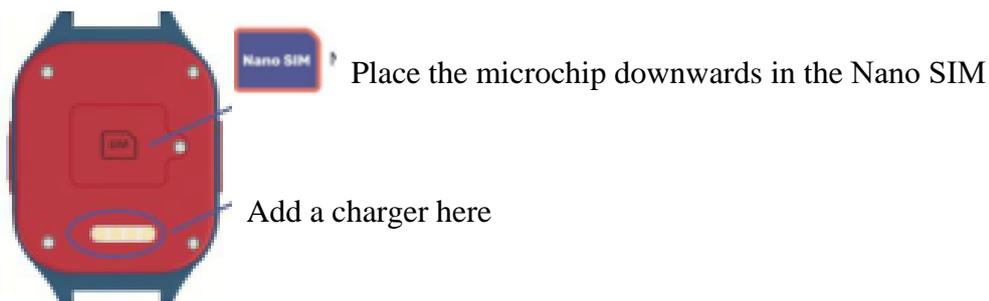

*Important! You can charge the watch with a charger supporting 5 V/1 A. Charging time 2-3 hours. We recommend recharging every day before the watch-phone is completely discharged.

Watch menu

Swipe the touch screen to find the following menu items:

1. **Address book:**
 - a. go in and click on a contact to make a call
 - b. press the power key on the display to end the call
2. **Voice messages (Conversations):**
 - a. go in and click on the received message to listen it
 - b. click "Start talking" and speak; release to send the message.
3. **Text messages:**
 - a. enter to read the received text messages.
 - b. go to the last selection message and find a table. Confirm it to delete all text messages.
4. **Settings:**
 - a. Time (set the time format, time, and date)
 - b. Language (here you can select the language of the device)
 - c. Volume (adjust the watch volume)
 - e. About – more technical information about the device
5. **IMEI number and QR code.**

Controlling the watch with Super-G app

How to install the app?

- You can find the Super-G app on Google Play and the App Store;
- Download the app to your phone or other smart device;
- Register the device in the app by pressing the menu function - **"Add a device"**:
 - a. Scan the QR code on the watch;
 - b. Or enter the IMEI/ID number you will find in the watch (or on the packaging)
- Follow the instructions in the app to set the parameters.



The watch can be controlled from several devices.

Should you have any questions, contact our team.



How to register and add Gudrutis?

1. Download the app, click "Start" and select your language.

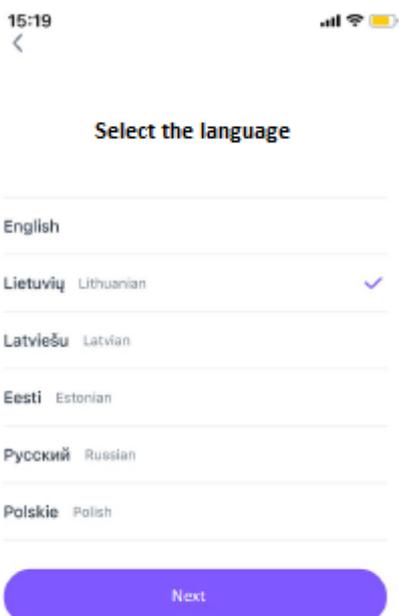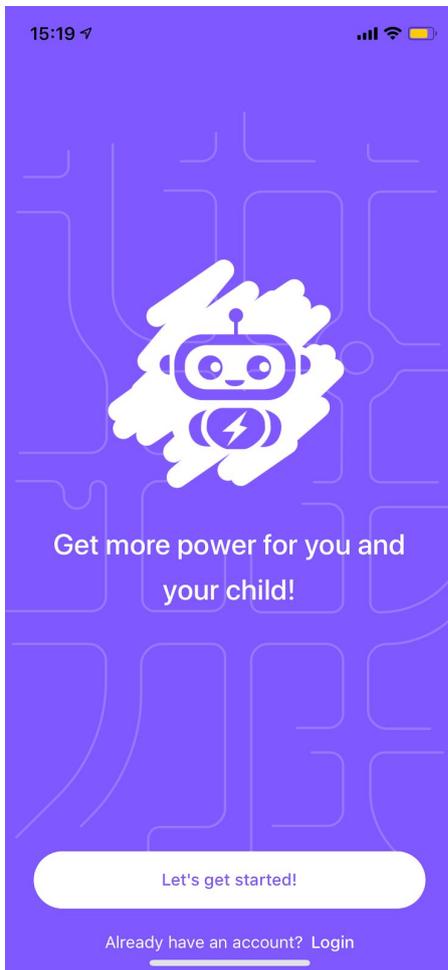

2. Scan the QR code on the watch (or on the box) or enter it manually.

15:23
<



Ready for Super Powers?

Add the device, edit settings,
and start using Super-G.

Scan the QR code

IMEI number

3. Enter the child information and fill in the address book.

Important! Allow access after you receive a notification about access to your phone's camera, photo gallery, location, and microphone. Otherwise, the app may not be fully functional.

14:34   

<

Enter the child information

1 2 3



Child's first name

Watch phone number

Next

14:35   

<

Add your phone number

✓ 2 3

First name

Telephone number

Next

You are connected!

More features of Super-G

Calls

How does it work? Clicking on the call icon at the bottom will take you to a window with a call history.

To call the watch directly, press the phone icon. You can also call the watch directly from the phone's address book.

To listen to the device, press the headset icon and select the phone number from which you want to listen the watch.

Messages

You will find a message icon in the bar at the bottom. Clicking it will take you to the message window.

In the window that opens, you can see incoming and outgoing voice and text messages.

Icons allow you to choose the type of message you want to send: voice or text.

To send a voice message, click on the microphone icon, speak and release.

To send a text message, click on the keyboard icon, enter the text, and press "Send".

Messages will go directly to the watch.

In the app you can listen or read the messages received from Gudrutis.

Child's location

You will see the map in the main app window (or by clicking the first icon in the bottom menu bar). A circle with the child's image shows the child's location. Click on the circle to see:

- preliminary location address
- date and time
- device battery
- navigation option (WiFi, GPS, or GSM)*
- directions to get to the location
- location update**

** Outdoors, the device navigates by WiFi and GPS, indoors by WiFi and GSM. Positioning error is possible depending on the communication operator, positioning signal and other technical conditions. This is not an exact location device!

In the upper right corner of the main window you will find:

- map type selection
- map update
- location of your phone

Multiple devices

You can add and conveniently manage multiple watches in the app:

- go to the menu in the top left corner;
- select "Watch List":
- click "+" in the upper right corner;
- scan the QR code on the watch (or on the box) or enter it manually;
- fill in the child information;
- when added successfully, the watch will appear in the app and in the watch list.

In the main window with a map, select one of the devices at the top while hovering over its profile.

Pressing the circle with the photo at the bottom will switch the device to its status and location (the function is not active if you have only one device).

More settings

Your profile and settings

Password changing

- > to change the password, click the icon in the upper left corner of the main window;
- > select "Change Password"
- > enter the old password;
- > enter a new password;
- > save;
- > password is changed successfully.

Password reminder

If you forget your app login password:

- > select the password reminder function;
- > enter the ensure-mail address of the account you for registration.
- > check your ensure-mail inbox on the same device;
- > in the incoming letter you will find a button with a link, click it (see the fig.);
- > you will be forwarded to the password change window (see the fig.);
- > change password and save it.

Super-G

Hello!

You are receiving this email because we received a password reset request for your account.



[Reset Password](#)

This password reset link will expire in 60 minutes.

If you did not request a password reset, no further action is required.

Regards,
Super-G

If you're having trouble clicking the "Reset Password" button, copy and paste the URL below into your web browser: <https://gudrutis.digitalaz.com/redirect/password/reset/bd69063da70d54242db713a8e496db814f66fbed16c4bc3fc67100c962d42bc8/174>

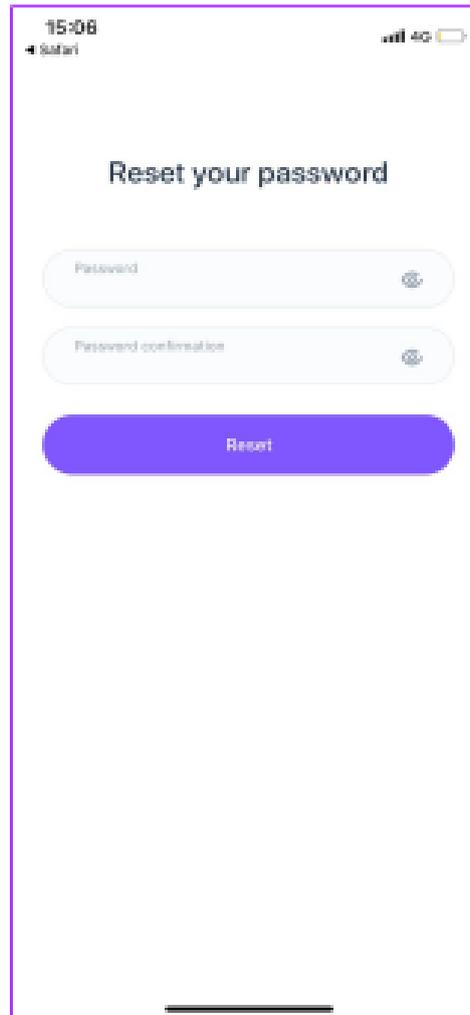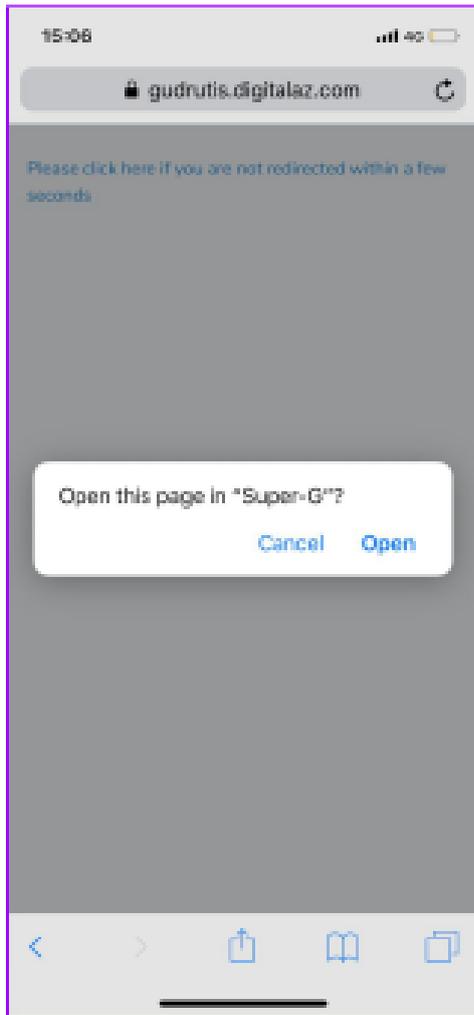

App language settings

- > To set the language, click the icon in the upper left corner of the main window;
- > Choose "Language";
- > Select your language and save.

Your profile settings in the app

- > To edit your profile settings in the app, click the icon in the upper left corner of the main window;
- > Select "Profile settings";
- > Edit the settings and save them.

Child profile and settings

In the lower right corner of the menu bar, press "More" to go to a menu with additional functions and settings.

At the top, select the device whose settings you want to edit (if you have more than one watch added).

Address book:

- > To add contacts to the address book, select "Contacts"
- > Click the "+" in the upper right corner
- > Enter the contact name and phone number
- > Additional features allow to add a contact as an administrator or add to the SOS (up to 3 contacts)
- > To delete a contact, click on it and select "Delete"
- > Added numbers will automatically appear on the watch. All other numbers are automatically blocked by the device.

Battery settings:

- > Click on the battery icon to edit the settings;
- > Standard mode: the map is automatically updated every 10 minutes.
- > ECO mode (the map is automatically updated every 30 minutes)
- > Battery saving mode (the map is automatically updated once an hour)

N.B.: the selected mode shortens/extends the battery life accordingly.
We recommend selecting the "Battery saving" mode.

Travel history:

- > Click the "History" icon to see the child's travel history
- > Select the day which history you want to see
- > Rendering may be inaccurate depending on the location method used (WiFi, GPS, or GSM)
- > Records in the travel history are stored for 3 months. After this period, the records are automatically removed from the app.

Alarm watch:

- > Click the alarm icon to add an alarm or reminder;
- > Press "+" to create a new alarm
- > Enter a name (it will only be seen in the app)
- > Set the time (alarm sounds repeatedly)
- > Additionally, you can select automatic alarm/reminder repetition
- > Save – the alarm will sound automatically on the watch

Not to disturb mode

Selecting this mode will lock the watch – the screen will be inactive and will not respond to touch. To set the "Do not disturb" mode:

- > Click the no-interference mode icon;
- > Press "+" to activate the "Do not disturb" mode
- > Enter a name (it will only be seen in the app)
- > Set the start and end times, and save

Ringtone

You can select ring, vibrate, or silent mode, depending on the watch model.

Additional settings:

- switching off the device remotely;
- time and date;

Warranty and servicing

Gudrutis products are covered by 2 year warranty.

The warranty does not apply to failures caused by mechanical damage or improper use. Wear and tear of the battery, other parts of the housing over time is not covered by the warranty.

This device is not a location finding device. The main function of the watch-phone is incoming and outgoing calls. Positioning is an additional feature, its accuracy may depend on technical conditions and circumstances.

Attention! Danger!

The watch is not waterproof (has no IP certificate). We do not recommend immersing the device in water/liquids or pouring water/liquids directly onto the housing. If the watch case is wet or mechanically damaged, the warranty shall be void.

Official warranty is provided by

UAB Promo vero
Company registration number 304041104
VAT code LT100009506518
Konstitucijos pr. 26, 08105 Vilnius
LT643500010002023659
Questions? Contact us!
Tel. +370 614 77866
E-mail labas@ieskokitgudrucio.lt

